




Programming Instructions

Model: CV180EUS15, V160ECOCAUS15 and V160EALBAUS15

Before starting, be sure you assemble the door lock correctly.

Step # 1

Reset

→ Press the  **Reset** button for ten (10) seconds until you hear three (3) beeps.

Step # 2 with deadbolt unlocked.

Door Direction Setting

→ 0 + 0 + 0 + 0 - Programming Code (PC) Number

→ 

→ 0

→ 

Step # 3 with deadbolt unlocked.

Delete All User Code (UC)

→ 0 + 0 + 0 + 0 - Programming Code (PC) Number

→ 

→ 3

→ 


Step # 4 with deadbolt unlocked.

Add New User Code (UC)

→ 0 + 0 + 0 + 0 - Programming Code (PC) Number

→ 

→ 1

→ 

→ Enter the new four (4) to ten (10) digit user code (UC) number.

→ 

 
Step # 5 with deadbolt unlocked.

Enable or Disable the Auto-Lock

→ 0 + 0 + 0 + 0 - Programming Code (PC) Number

→ 

→ 5

→ 

 
Step # 6 with deadbolt unlocked.

Customize the Auto-Lock Timer


→ 0 + 0 + 0 + 0 - Programming Code (PC) Number

→ 

→ 6

→ 


→ Enter numbers from 1 + 0 to 9 + 9 in order to configured seconds between ten (10) to ninety nine (99).

→ 

 
Step # 7 with deadbolt unlocked.

Add Remote Control (up to twenty (20) feet of range)

→ 0 + 0 + 0 + 0 - Programming Code (PC) Number

→ 

→ 1 + 0

→ 

Instructions for Remote Controls (BEEPERS) – Lock Programming

While the Toledo key is blinking orange or red, you must program the remote control.

Follow the steps below:

Press and hold the close lock button until you hear three beeps. The indicator light will start blinking orange or red. Press and hold the open lock button until you hear three beeps. The indicator light will start blinking orange or red. Once the Toledo key stops blinking, the programming is complete.

You can now test the beeper.

Repeat the same procedure for the other lock.

Step # 8 with deadbolt unlocked.

Delete All Remotes Controls (up to twenty (20) feet of range)

- 0 + 0 + 0 + 0 - Programing Code (PC) Number
- TOLEDO
- 1 + 1
- TOLEDO

Advance Programing

Change Programing Code (PC) with deadbolt unlocked.

- 0 + 0 + 0 + 0 - Programing Code (PC) Number
- TOLEDO
- 4
- TOLEDO
- Enter the new four (4) to ten (10) digit programing code (PC) number.
- TOLEDO

Delete one user code (UC) at a time with deadbolt unlocked.

- 0 + 0 + 0 + 0 - Programing Code (PC) Number
- TOLEDO
- 2
- TOLEDO
- Enter user code (UC) number you want to delete.
- TOLEDO

Temporary Disable All User Codes with deadbolt unlocked.

- 0 + 0 + 0 + 0 - Programing Code (PC) Number
- TOLEDO
- 8
- TOLEDO

Single Entry User Code with deadbolt unlocked.

- 0 + 0 + 0 + 0 - Programing Code (PC) Number
- TOLEDO
- 9
- TOLEDO
- Enter the new four (4) to ten (10) digit user code (UC) number.
- TOLEDO

Volume Control with deadbolt unlocked.

- 0 + 0 + 0 + 0 - Programing Code (PC) Number
- TOLEDO
- 7
- TOLEDO